

PRESTTO™ for Quick & Accurate Takeoffs

Measure Routines	Description
Length	The Length command allows you to measure the length of continuous line segments on the plans—straight or curved.
Area	The Area command allows you to measure the enclosed area and perimeter length of regions on the plans.
Count	The Count Units command allows you to quickly count the number of units of an item on the plans
Separate Lengths	The Separate Lengths command allows you to quickly measure the total length of separate straight line segments on the plans

Look at what you get with PRESTTO

- User Configured Graphics including choice of colors, line thickness, & text
- Layer function to compartmentalize detailed drawings for clearer viewing
- Floating toolbar for perfect placement, out of the way of your takeoff
- Easily Export to Excel and any Windows Spreadsheet or Estimating program
- Uses any WinTab Driver Digitizer
- Easily UPGRADABLE to WinScale
- Perform accurate takeoffs in minutes

The screenshot shows the PRESTTO software interface. The main window displays a floor plan with several rooms: Hall (red), Utility Room (blue), Supplies (purple), Work Area (green), Records (green), and Treatment Rooms (green). The software has a menu bar (File, Measure, END-Measure, Options, Layer, View, Help) and a toolbar. A floating toolbar is visible on the left. The 'Answer List' window is open on the right, showing a table of measurements.

Answer List			
Excel default config			
Worksheet: Total:			
	A	B	C
1			
2	Area: Drywall res		
3	Description	Value	Uni
4	area (TOTAL)	990.21	ft ²
5	area (ADDED)	990.21	ft ²
6	area (SUBTRACTED)	0.00	ft ²
7	area perimeter	86.88	ft
8	area count		
9	area (TOTAL)	110.02	yr ²
10	area (ADDED)	110.02	yr ²
11	area (SUBTRACTED)	0.00	yr ²
12	area squares	9.90	
13			
14	Length: exterior		
15	Description	Value	Uni
16	length (TOTAL)	79.45	ft
17	length (ADDED)	79.45	ft
18	length (SUBTRACTED)	0.00	ft
19	length segment count	1	
20			
21	Separate Length		